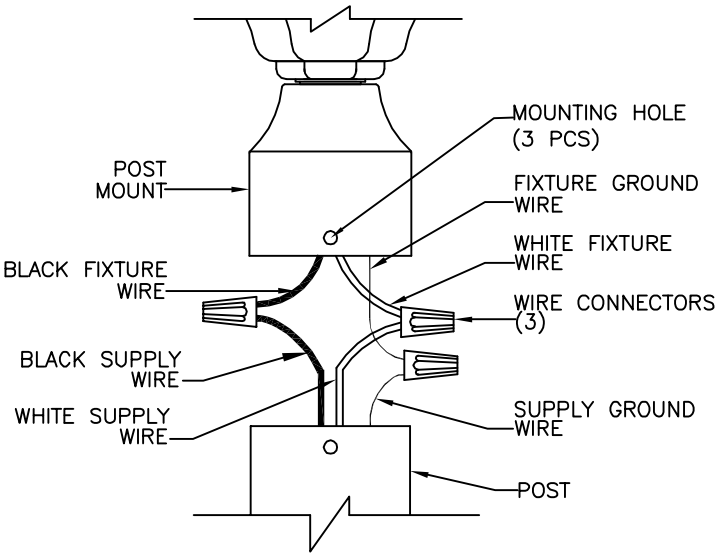

WIRING DIAGRAM

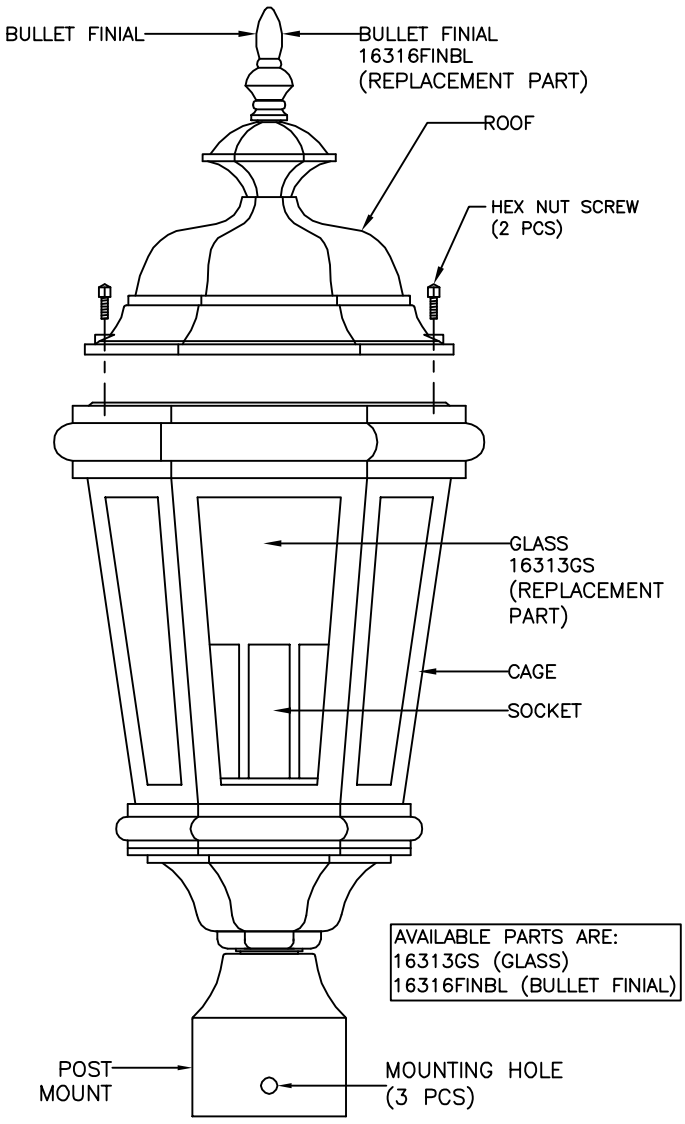

INSTALLATION INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY.

THIS LANTERN SHOULD TAKE APPROXIMATELY 10 MINUTES TO ASSEMBLE.

MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

CAUTION: TO AVOID POSSIBLE ELECTRIC SHOCK, MAKE SURE THE ELECTRICITY IS SHUT OFF AT THE MAIN PANEL. IF YOU ARE REPLACING AN EXISTING FIXTURE, FIRST TURN THE FIXTURE OFF. NEXT, TURN THE WALL SWITCH OFF. FINALLY, GO TO THE MAIN FUSE OR BREAKER BOX IN YOUR HOME. TURN THE FUSE OR BREAKER TO THE OFF POSITION. SOME TYPES OF FUSES MUST BE UNSCREWED TO SHUT OFF THE POWER.

* ALL WIRING MUST BE DONE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRIC CODES.

** IF YOU DO NOT HAVE ELECTRICAL WIRING EXPERIENCE, HAVE YOUR FIXTURE INSTALLED BY A QUALIFIED LICENSED ELECTRICIAN.

*** THIS FIXTURE IS TO BE MOUNTED TO A UL LISTED POST CAPABLE OF SUPPORTING THE WEIGHT OF THE FIXTURE.

TOOLS: YOU WILL NEED THE FOLLOWING TOOLS OR EQUIPMENT: SCREWDRIVER, PLIERS, ADJUSTABLE WRENCH.

UNPACK THE LANTERN: YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: ROOF ASSEMBLY, CAGE ASSEMBLY, (3) SCREWS AND (3) CONNECTORS. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE.

INSTALLING THE LANTERN

1. RAISE FIXTURE UP TO POST FOR WIRING. ATTACH THE WHITE OR RIBBED FIXTURE WIRE TO THE WHITE SUPPLY WIRE USING A WIRE CONNECTOR. ATTACH THE BLACK OR SMOOTH FIXTURE WIRE TO THE BLACK SUPPLY WIRE WITH A WIRE CONNECTOR. ATTACH THE FIXTURE AND SUPPLY GROUND WIRES TOGETHER AND SECURE WITH A WIRE CONNECTOR.

2. PLACE FIXTURE ON POST AND ALIGN HOLES. SECURE WITH (3) MOUNTING SCREWS.

3. INSTALL A 60 WATT MAXIMUM CANDELABRA BASE TYPE "C" BULB (NOT INCLUDED) INTO EACH SOCKET.

4. PLACE ROOF ASSEMBLY ONTO CAGE ASSEMBLY AND SECURE WITH (2) HEX NUT SCREWS.

5. RESTORE POWER. YOUR FIXTURE IS NOW READY TO USE.